



QLine Barrier Assembly Instructions

PARTS LIST:



**Base
with Cover**




Bolt



Allen Wrench



Post



**Retractable Belt
Banner Head**

1. Unpackage all materials.
2. Slide Sheet Metal cover on top of Base.
3. Insert Hex Nut on bottom of Post into Base Assembly. Figure A
4. Tilt Post and Base so they are parallel to the ground. Make sure Post is fully inserted into Base.
5. Insert Bolt with washer into bottom of Base and tighten with Allen Wrench to secure Post to Base.
6. Stand Post upright.
7. Secure Banner Head to top of Post by turning it clockwise until tight.

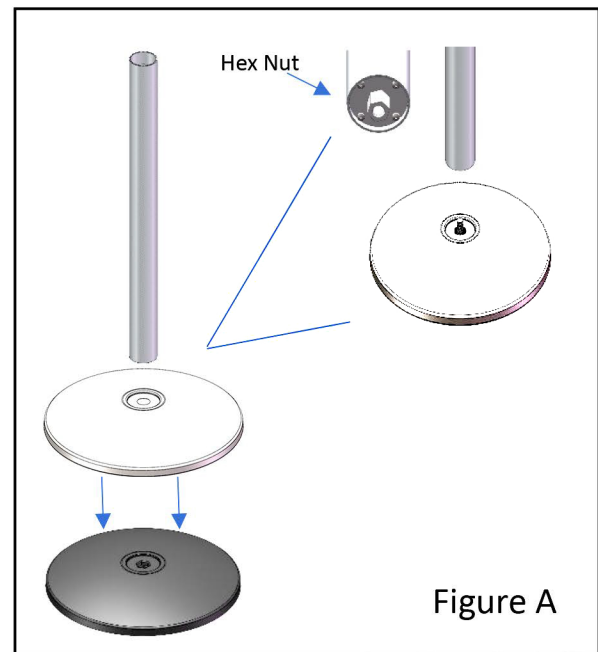


Figure A

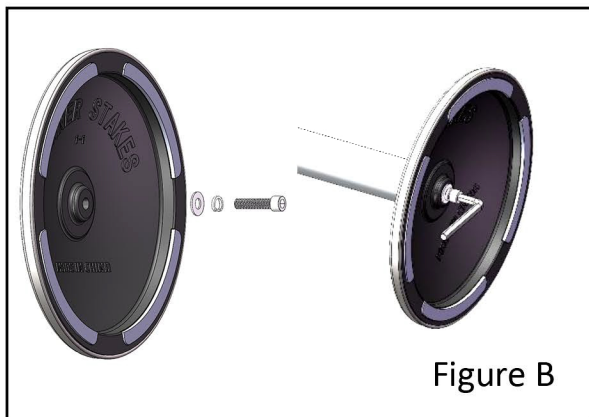


Figure B

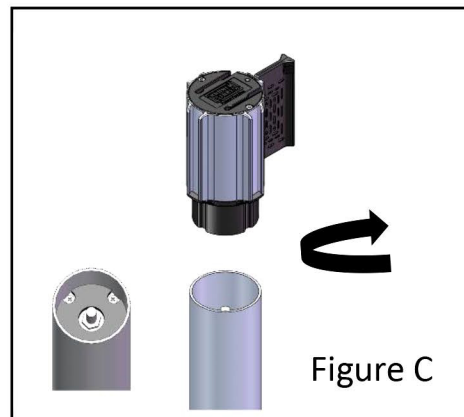


Figure C

