






QLine Dual Belt Barrier Assembly Instructions

PARTS LIST:

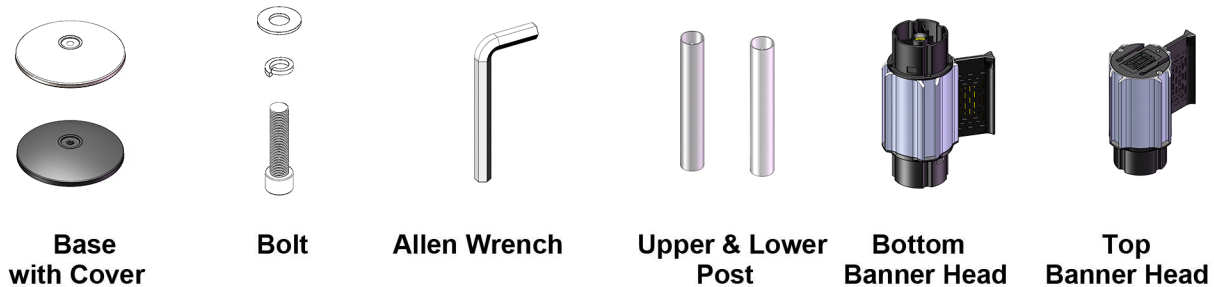

1. Slide Sheet Metal cover on top of Base.
2. Insert Hex Nut on bottom of Lower Post into Base Assembly. Figure A
3. Tilt Lower Post and Base so they are parallel to the ground. Make sure Lower Post is fully inserted into Base.
4. Insert Bolt with washer into bottom of Base and tighten with Allen Wrench to secure Post to Base. Figure B
5. Stand Post upright. Secure Bottom Banner Head to Lower Post by turning it clockwise until tight. Make sure rounded receiver slots are facing up. Figure C
6. Secure Upper Post to Bottom Banner Head by turning it clockwise until tight. Rubber padding inside Upper Post should be facing up. Figure D
7. Secure Top Banner Head to Upper Post by turning it clockwise until tight and ribbon handles of both Heads line up in the same direction. Figure E

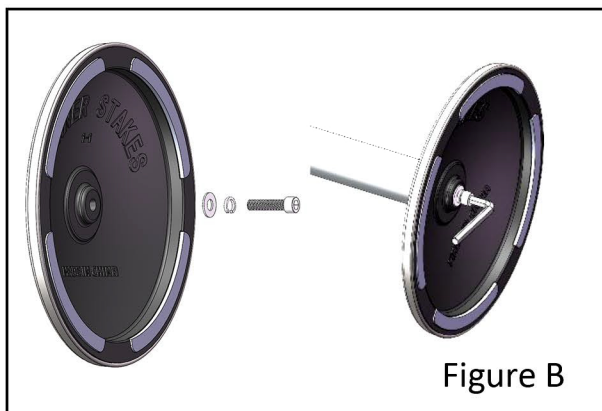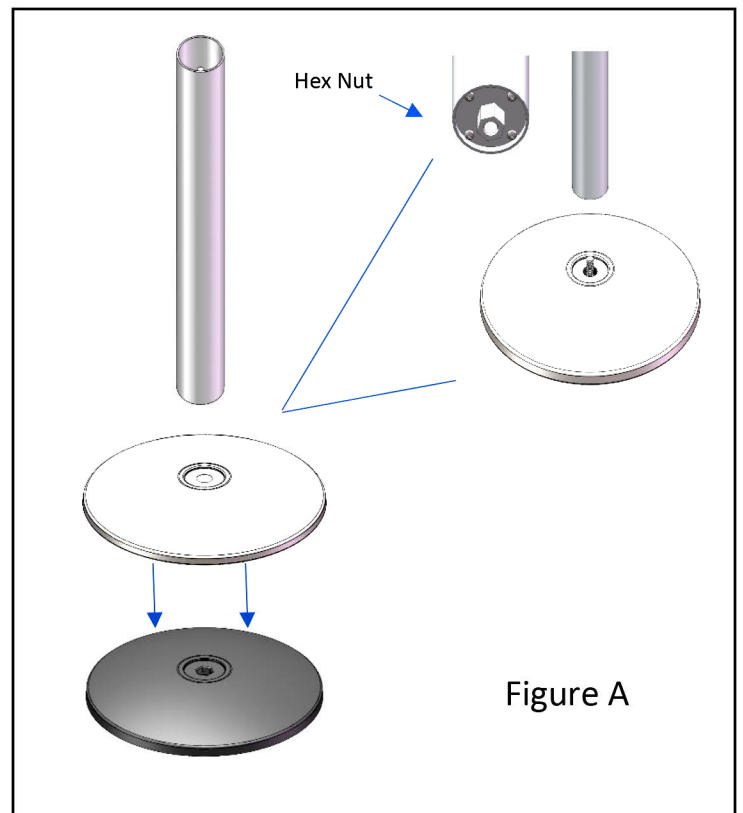

QLine Dual Belt Barrier Assembly Instructions

